


### 2000-2003 DODGE NEON - 4cyl. 2.0L

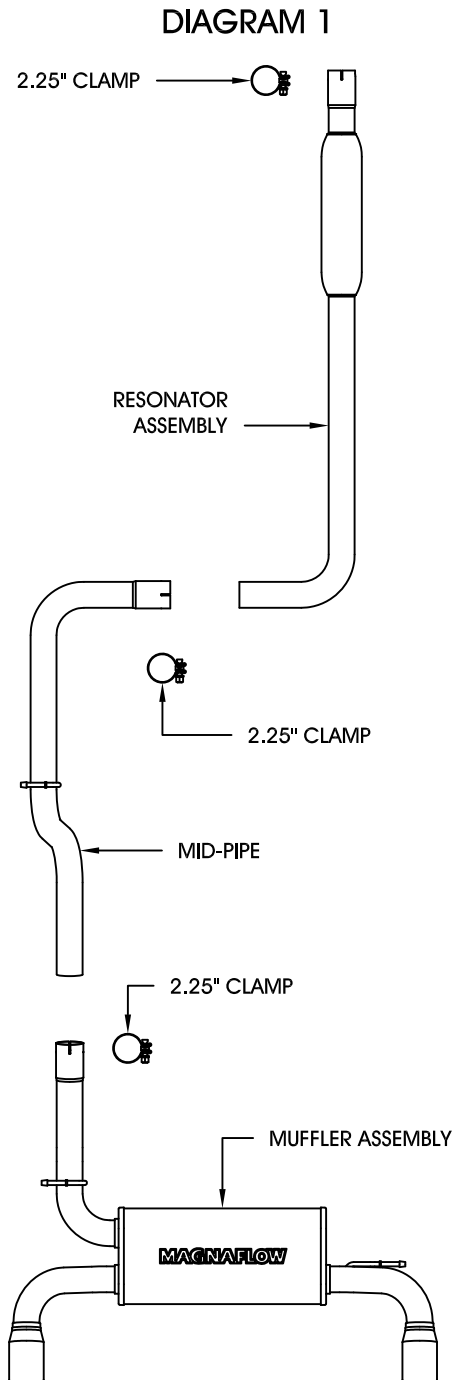

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

**Step 1:** (Carefully read all instructions before installation) To remove the OEM exhaust system, loosen the clamp fastening the exhaust pipe to the catalytic converter, and the clamp fastening the exhaust pipe to the muffler assembly. You can now disengage the welded hanger on the forward section of the exhaust system from the OEM rubber insulator and remove it from the vehicle (Do not damage the OEM rubber insulators, as they will be reused to mount the new system). Remove the OEM muffler assembly in the same fashion.

**Step 2:** Leaving all clamps loose for final adjustment, install the new resonator assembly by fastening it to the catalytic converter using a supplied clamp as shown in Diagram 2 (Be sure the peg is fitted into the alignment notch as shown or the system will not fit correctly). Install the mid-pipe by fastening it to the resonator assembly and by fitting the welded hanger into the OEM rubber insulator. Install the muffler in the same fashion.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners and clamps from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent exhaust leaks (Approximately 40 ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.


\*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688

2000-2003 DODGE NEON - 4cyl. 2.0L

DIAGRAM 2

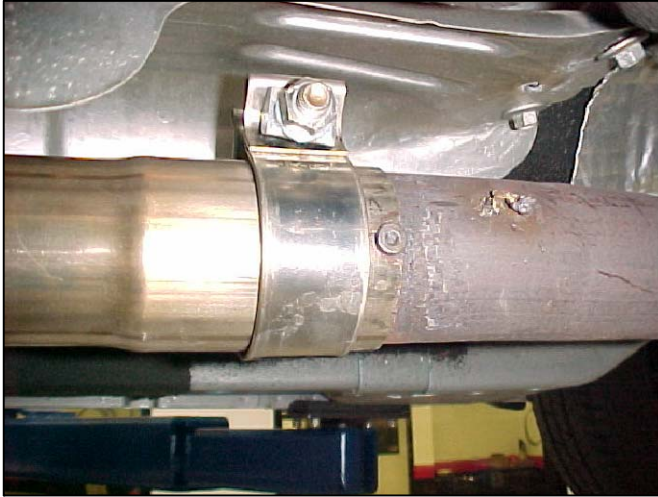

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

\*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688