


### 2013 - 2015 Honda Civic 2.4L Sedan

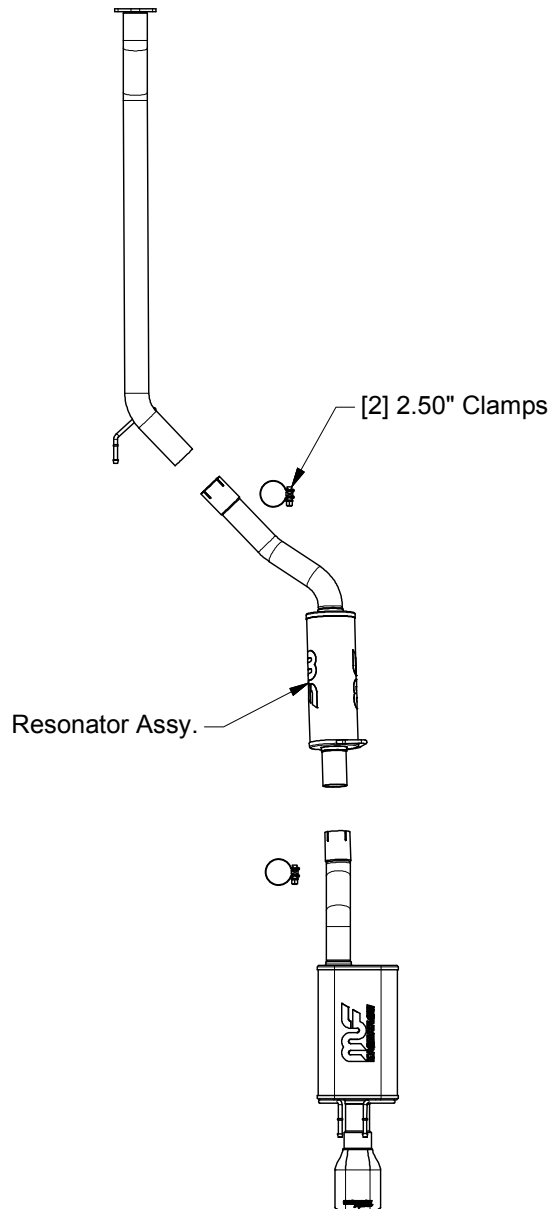

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

**Step 1:** (Carefully read all instructions before installation) Begin removal of the OEM exhaust system by unbolting the inlet flange from the catalytic converter. Do not damage or discard the OEM fasteners or rubber insulators, as they will be used to mount the new exhaust system. Disengage the welded hangers from the OEM rubber insulators and remove the entire OEM exhaust system.

**Step 2:** Install the new exhaust system front to rear. Attach the Inlet Pipe Assembly to the catalytic converter outlet using the OEM fasteners and insert the welded hanger into the OEM rubber insulator. Leave all clamps loose for the final adjustment of the complete system. Using the supplied 2.50" clamps, install the Resonator and Muffler Assemblies in a similar fashion.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**\*\* Magnaflow Performance Exhaust recommends professional installation on all their products**