

MAGNAFLOW

Mufflers, Converters,
Systems and Tips

Performance EXHAUST

1998-2001 DODGE RAM CUMMINS
CAB

INSTALLATION INSTRUCTIONS FOR 15910

1-6 5.9L, QUAD
CAB

Note: MAGNAFLOW advises against the removal of catalytic converters. If the vehicle was originally equipped with a catalytic converter, this exhaust system is intended for off-road and racing applications only.


Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. To remove the OEM exhaust system, begin by unbolting the downpipe section from the turbo housing. Do not discard the OEM fasteners, as they may be reused to mount the new system. Unbolt all clamps connecting the exhaust together, then remove the OEM components by disengaging the welded hangers from the OEM rubber insulators. Do not damage the OEM rubber insulators as they will be reused to mount the new system.

Step 2: Begin installation of the new system by fastening the new downpipe to the turbo housing using the OEM fasteners. Leave all fasteners loose for final adjustment of the complete system. Working rearward, install the mid-pipe(s) using the supplied clamps and by fitting the welded hangers into the OEM rubber insulators. Install the muffler and tailpipe pieces in the same fashion.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). U-bolt clamps should be tightened to approximately 30-35ft-lbs. Reconnect the battery and start the vehicle to check for leaks. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

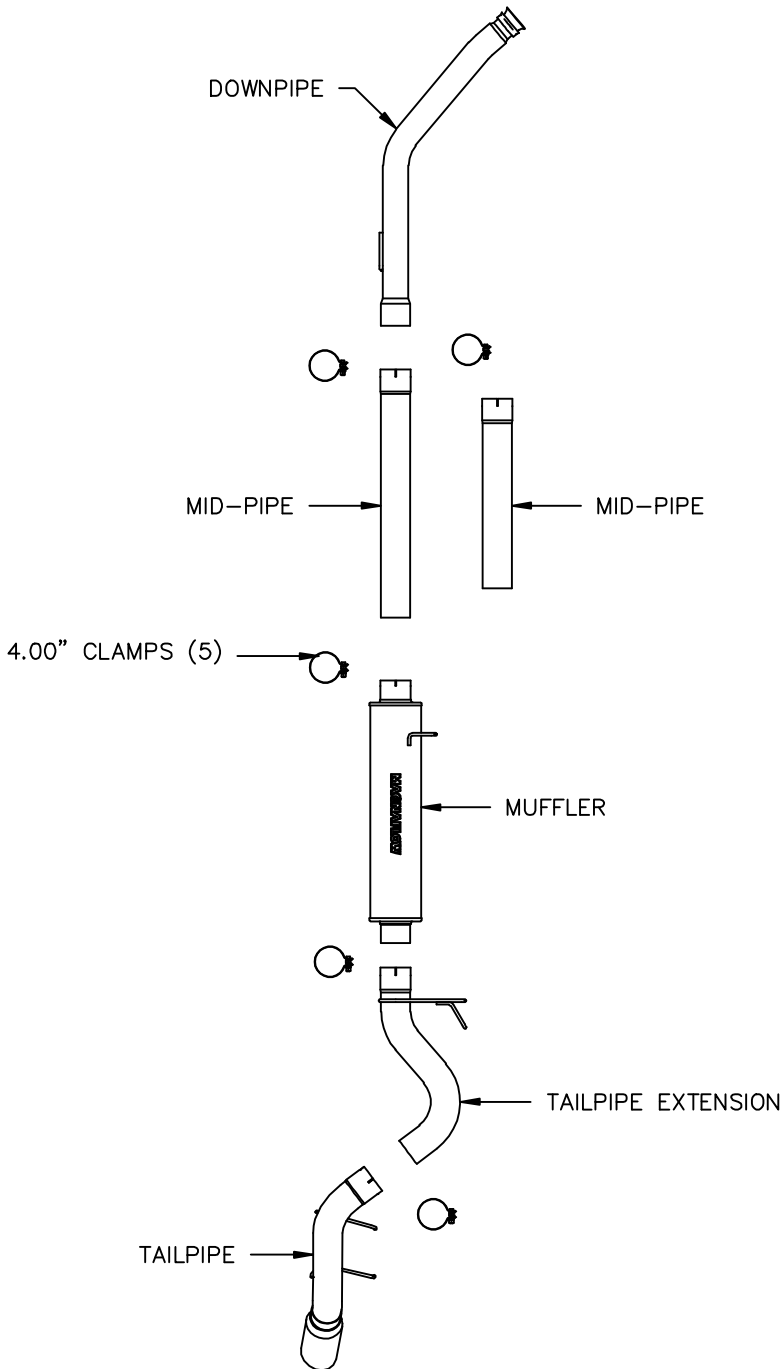

***MAGNAFLOW Performance Exhaust recommends professional installation on all their products**

Technical support: 1-800-959-9226 ext. 4500
MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa
Margarita, CA 92688