


2007- 2011 Dodge Ram 2500/3500

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

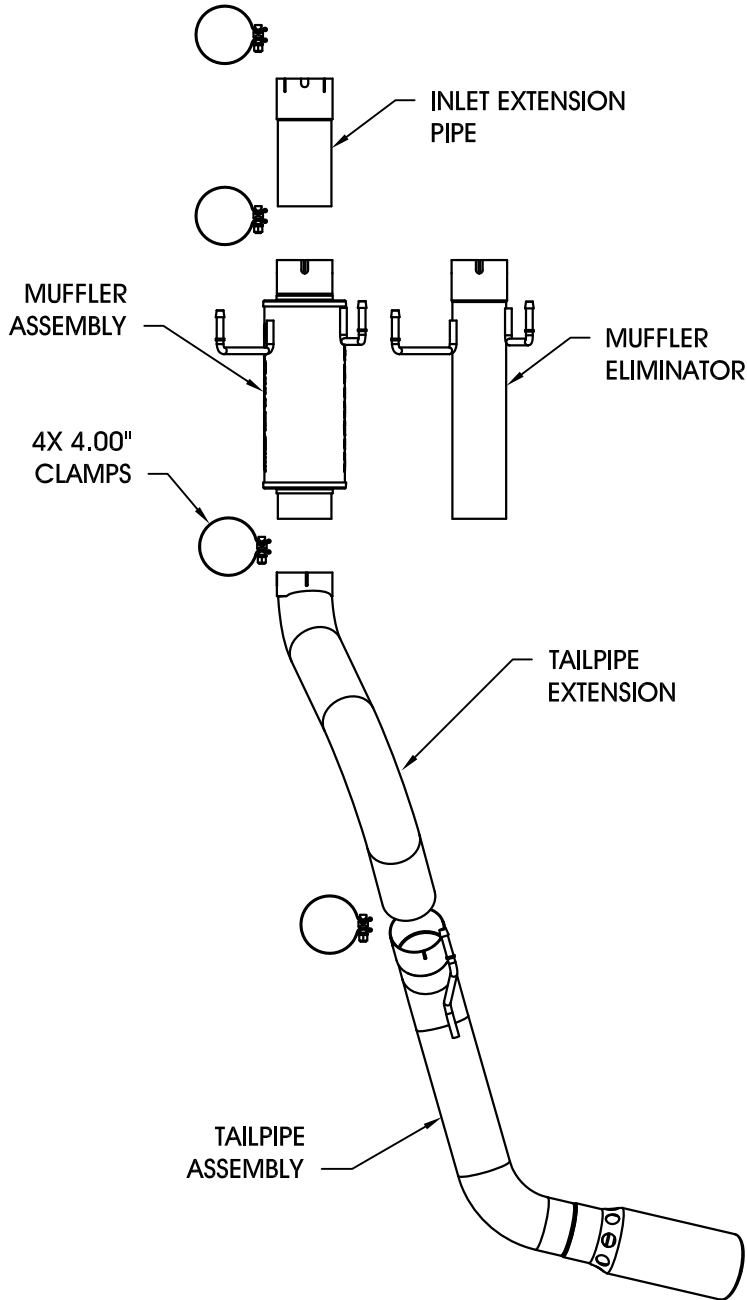

Step 1: (Carefully read all instructions before installation) To remove the OEM system, you need to loosen the clamps at the front and rear of the OEM muffler, you can then disengage the hangers from the rubber insulators and remove system. Do not damage or discard the OEM gasket, fasteners, or rubber insulators, as they will be reused to mount the new system.

Step 2: For year range '07 - '10 install the new inlet pipe directly to the OEM inlet extension. For year model '11 remove the OEM inlet extension pipe and replace it with the supplied Inlet Extension Pipe and loosely secure using the supplied clamp. Attach the inlet pipe to the inlet extension pipe (OEM pipe for '07 - '10). Install either the Muffler or Muffler Eliminator and Tail Pipe in the same fashion. Locate all welded hangers to the rubber isolators.

Step 3: Install the new muffler or muffler eliminator, tailpipe extension, and tailpipe using the supplied 4.00" clamps and by fitting the welded hangers into the rubber isolators.

Step 4: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 5: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). U-bolt clamps should be tightened to approximately 30-35ft-lbs. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500