

# MAGNAFLOW®


Mufflers, Converters,  
Systems and Tips

*Exhaust*  
PRODUCTS

## 2014 CHEVY/GMC SILVERADO/SIERRA 2500HD/3500HD 6.6L

### INSTALLATION INSTRUCTIONS 17854

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

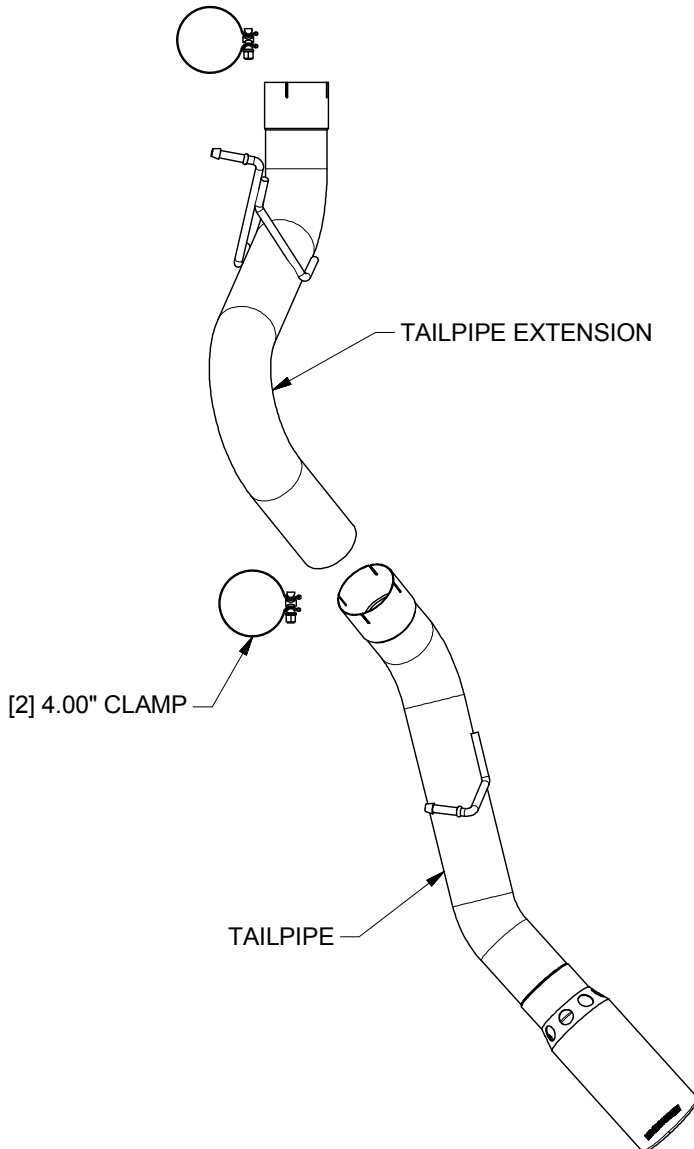

**Step 1:** (Carefully read all instructions before installation) To remove the OEM system, you will need to cut the tailpipe 19 1/2" behind the DPF. Disengage the welded tailpipe hangers from the rubber insulators. Do not damage or discard the OEM gasket, fasteners, or rubber insulators, as they will be reused to mount the new system.

**Step 2:** Install the new tailpipe extension using the supplied 4.00" clamps and by fitting the welded hangers into the rubber insulators. Install the new tailpipe using the supplied 4.00" clamps and by fitting the welded hangers into the rubber insulators but leave all clamps and fasteners loose for final adjustment of the complete system.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). U-bolt clamps should be tightened to approximately 30-35ft-lbs. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**\*\* Magnaflow Performance Exhaust recommends professional installation on all their products**